


INSTALLTION STEPS

CAUTIONS:Please colse all water valves before installation

1. Concealed embedded main body

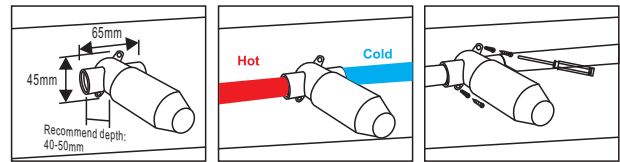


Reserve the size of the embedded body according to the size

Connect the pre-buried pipeline, the left side is hot water, and the right side is cold water. Test for leaks after connection

Use glue particles and screws to secure to the wall


2.Installation of Bidet spray head

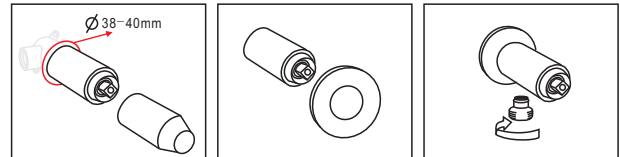

Seal with cement and tiles, Take off the protective cover

Slip in a decorative cap


Screw on the interface

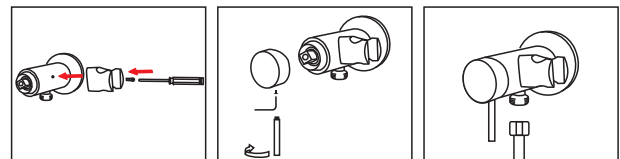

Fix with screws

Fasten with hexagonal screws, Attach the pole


Hose connecting the faucet body

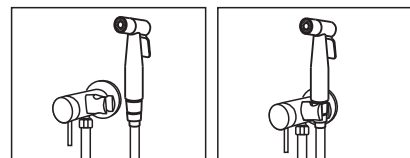


Hose connection spray gun

Completed


PRODUCT MANUAL

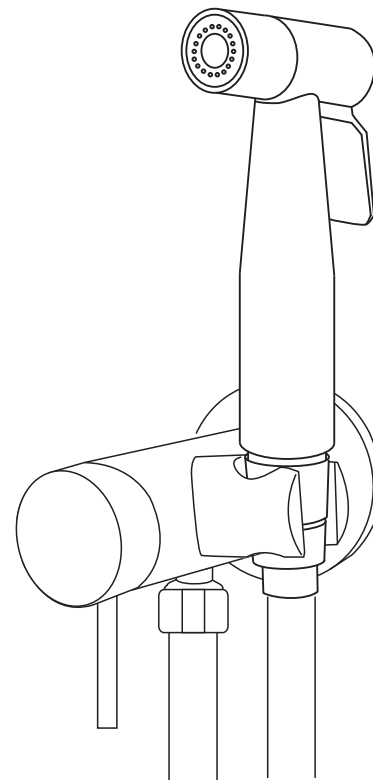

PACKING LIST

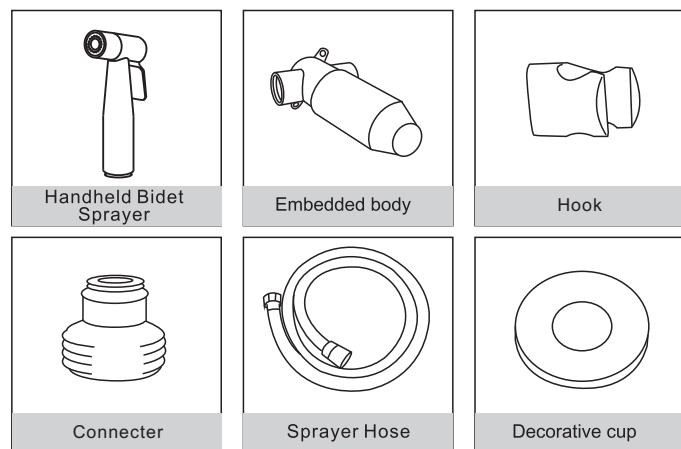

SPARE PARTS

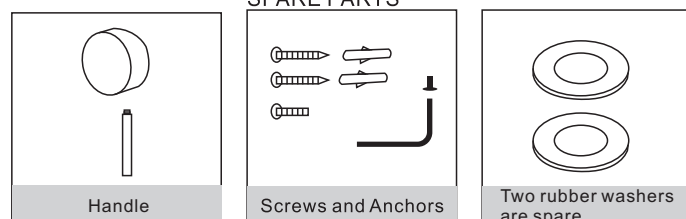

Installation Step

